

THREAD TURNING TOOLHOLDERS

external



Insert mm	Part Number	B/H mm	L mm	F mm
16	SER_1212_F16	12	80	16
16	SER_1616_H16	16	100	16
16	SER_2020_K16	20	125	20
16	SER_2525_M16	25	150	25
16	SER_3232_P16	32	170	32
22	SER_2525_M22	25	150	25
22	SER_3232_P22	32	170	32
22	SER_4040_R22	40	200	40
27	SER_2525_M27	25	150	32
27	SER_3232_P27	32	170	32
27	SER_4040_R27	40	200	40

Spare Parts

Insert mm	Screw to insert	Torx key	Screw to anvil	Anvil
16	S16	K16	A16	AE16...
22	S22	K22	A22	AE22...
27	S27	K27	A27	AE27...

■ The Part Numbers are for Right Hand Toolholders. For Left Hand specify L instead of R. Give Helix Angle for Anvil, ex. AE16+0.5